




NRAY SERVICES INC.

56A Head Street Dundas Ontario, Canada L9H 3H7

Phone: 905.627.1302 Fax: 905.627.5022

Email: info@nray.ca URL: www.nray.ca

NRAY Neutron Radiography Sample Image - Corrosion

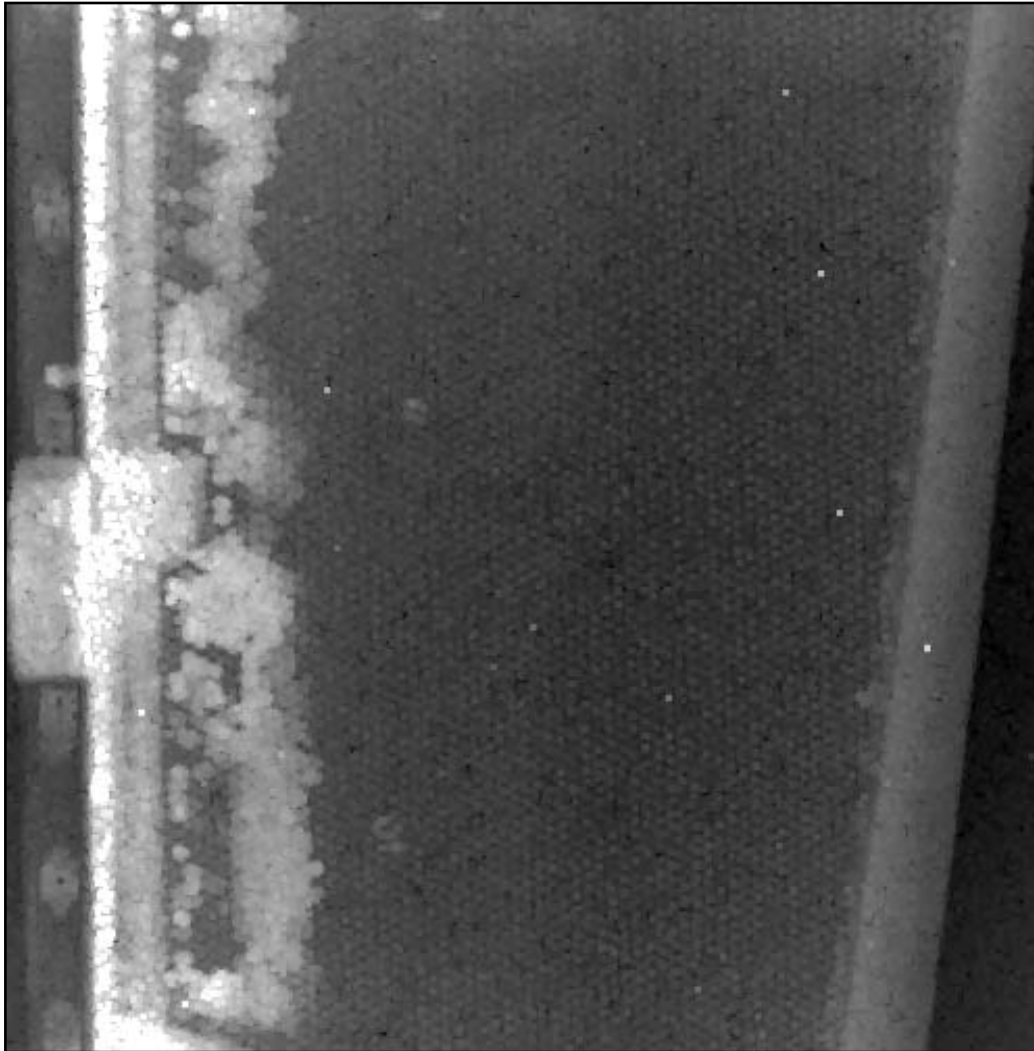

Shown above is a neutron radiograph of the honeycomb structure of an aircraft flight control surface. Along the left vertical edge of the image is a white band; water and corrosion in the Aluminum honeycomb structure. Neutron radiography can be used to effectively image water and corrosion within Aluminum products.